


DATA SHEET

GWS 40x20-K | 50 - 220 W Aluminium Resistor cRUus 600 / 1000 V

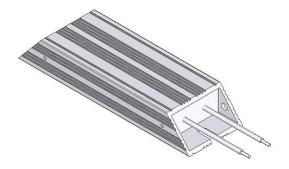

Article-No.		ds3000 3313				
Туре		GWS 127	GWS 160	GWS 240	GWS 300	
Pulse Power (W) T _a ~ 40 °C *referred to a cycle duration of 120s Approximate value (depending on resistance)	ED 6 %*	450	900	1530	1980	
	ED 15 %*	250	500	850	1100	
	ED 25 %*	150	300	510	660	
	ED 40 %*	100	200	340	440	
Nominal continuous power (W) T _a ~ 40 °C		50	100	170	220	
Resistance Values at 20°C (Ohm)		3.6 - 680	7.5 - 910	10 - 910	15 - 1200	
Tolerance of resistance at 20°C		±10 %				
Degree of protection (EN 60529) (in the accordingly screwed on state)		IP 54				
Max. permissible operating voltage		UL 600 / 1000 V				
Cooling		natural convection				
Housing temperature at nominal continuous power $\rm T_a \sim 40~^\circ C$		<300 °C				
Electrical terminal		2x AWG 18 / I=25 cm				
Operation temperature range		-25 +40 °C				
Testing voltage		2.7 kV AC 1 s				
Approvals/marking		UL; CSA				
Mounting positions						


Subject to technical modifications

HEINE Resistors GmbH · Otto-Mohr-Straße 5 · 01237 Dresden · Germany · Tel: +49 (0) 351 3192-0 · E-Mail: info@heine-resistors.com Gerichtsstand Dresden · HRB 3315 · USt-IdNr: DE 181022992 · St.-Nr 203/110/04604 IBAN: DE64 8508 0000 04022658 00 · BIC: DRESDEFF850 Geschäftsführer: Patrick Rudolph Ein Unternehmen der Knorr-Bremse AG



DATA SHEET





Article-No.		ds3000 3313				
Туре		GWS 127	GWS 160	GWS 240	GWS 300	
Length [mm]	11	127	160	240	300	
	12	110	145	225	285	
Width [mm]	bl	40	40	40	40	
Height [mm]	hl	20	20	20	20	
Weight approx. [kg]		0.2	0.25	0.33	0.4	
Isolation resistance		>10 M Ohm				
Last update		2015-02-25				

Mounting instruction:

The distance between the two fixing points increase at 0,85 mm / 100 mm while heating (mounting with fixed and movable bearing). The resistor should be protected by appropriate safety measures against overloading.

Do not mount the resistor with any obstruction in the air inlet or air outlet area.

Mount the resistor on a plane area.

The resistor has to be grounded.